 


Audio Door Phone Handset

MODEL:7420CX

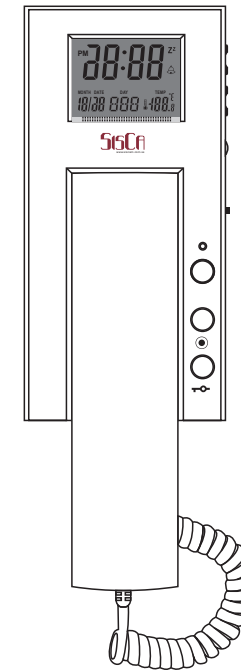

IMPORTANT CAUTIONS.....	1
PARTS CHECKLIST.....	1
FEATURES	2
DATE, TIME AND TEMPERATURE	3
CONNECTION.....	3
INSTALLATION.....	4
SPECIFICATIONS.....	5


SPECIFICATIONS

No.	Parameter	Description
1	Model No:	7420CX
2	Power Consumption	Stand by <50mA, Working <100mA
3	Connection method	4 wire
4	Communication	Simultaneous type
5	Communication Duration	60s(+/-20%)
6	Communication Distance	AWG #22-26, 50-100 meter
7	Operating Temperature	-10°Cto +40°C
8	Weight	Net: 0.22Kg, Gross: 0.32Kg
9	Dimensions (mm)	272*95*35mm

INSTALLATION

After determining the mounting locations for the monitor, fix the mounting bracket securely to the wall. Drill a hole in the Center area of the bracket just large enough for the two wire cable to get through


1. Connect the handset cord to the monitor unit.
2. Attach the wired monitor unit to the wall mounting bracket.
3. Connect the 4pin wire to monitor. The power will be supplied from the monitor.
4. Test the unit.

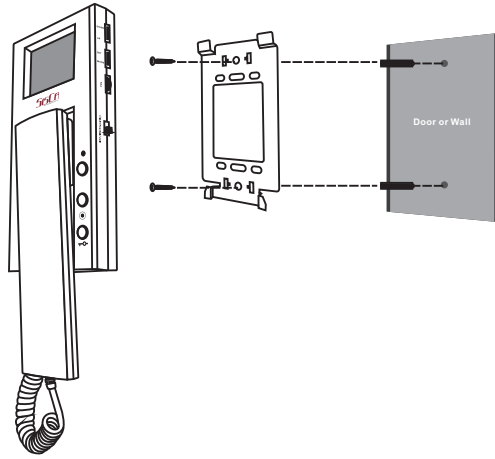

IMPORTANT CAUTIONS

1. To prevent fire or shock hazard, do not expose the unit to rain, moisture or other liquid and do not overload the power cord.
2. Instructions! Read and keep the instructions-all safe and operating instructions should be read and followed before the unit is operated.
3. Power Sources! This equipment should be operated only from the type of power source indicated on the marking label and the power cord protection is needed.
4. Servicing and replacement of parts! Do not attempt to service this product or replace any parts inside by yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
5. Lightning! For added protection for this product before a lightning storm, or when it is left unattached and unused for long periods of time, unplug it from the wall outlet and disconnect the cable system. This will prevent damage to the product due to lightning and power-line, telephone-line, RF cable and Actuator/Polarization surge protectors to protect your system from possible damage.
6. Move with care! This product is easy for damage, care for it during transportation, storage and installation.

PARTS CHECKLIST

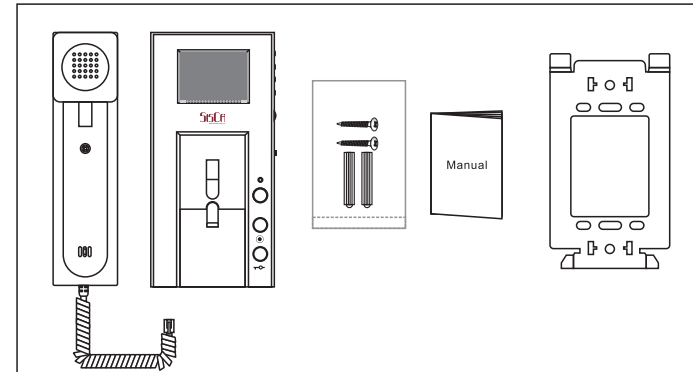


■ Handset	1PCS	■ Mounting Bracket	1PCS
■ Unit	1PCS	■ Insertion plastic	2PCS
■ 4x18Mounting Screw	2PCS	■ User manual	1PCS

FEATURES

7420CX is a four wire audio only handset with features:

1. 4 wire to CX camera or out door panels;
2. Remote lock release;
3. Extendable another handset in same apartment and with intercom function;
4. With calendar and thermometer functions.

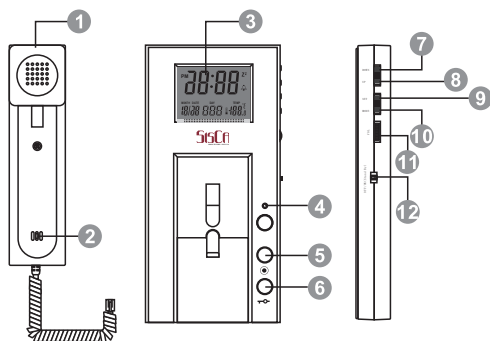

- | | |
|--|--|
| <ol style="list-style-type: none"> 1. Handset; 2. Microphone; 3. LCD display; 4. Power indicator; 5. Call button: to call monitor in same apartment; 6. Lock release button: pressed to open the door; | <ol style="list-style-type: none"> 7. “Down” button; 8. “UP” button; 9. “SET” button; 10. “MODE” button; 11. Bell volume switch; 12. Backlight switch. |
|--|--|

DATE, TIME AND TEMPERATURE


1. Time/Date Setup

- (1) When the unit is connected to a power, it will be in working status.
- (2) Press SETUP key to start time/date setup mode.
- (3) Press UP/DOWN to select right Hour, Minute Year, Month, Date and Week Day. After settings, you can press MODE key to exit or the unit will exit automatically after 1 minute.
- (4) In normal standby status, you can press UP key to switch between 12/24 hour system.

2. Temperature Setup

In normal standby status, you can press DOWN key to switch between Celsius and Fahrenheit temperature.

CONNECTION

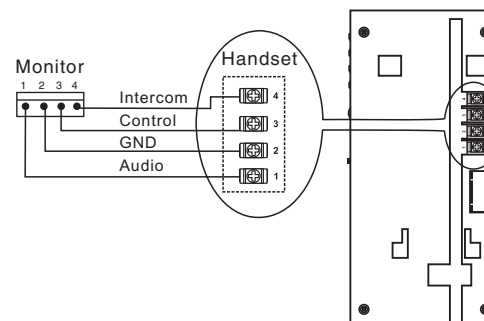

There is a 4-pin connectors on the back to be connected with monitor, the definitions are:

Wire No.	1	2	3	4
Wire Definition	Audio	GND	Control	Intercom
Recommended Cable	AWG #22-26			